

RADIO CODE PROGRAMMING

The radio code is a 10 bit digital code that is transmitted to the garage door operator. **This code must be set to match the code on the 10 position switch on the garage door operator receiver.** To begin programming or change the radio code press the “radio learn” key twice (The indicator LED (*see figure 2*) will come on, indicating learn mode. During the learn mode, the indicator LED will blink off with each keypress). Now enter the present four digit access code (**Note: For first time programming, this would be the factory code 1, 2, 3, 4**). Now enter the new radio code (**Note: This will be the code on the garage door operator receiver. Only enter the corresponding numbers on the 10 position switch that are in the “on” (closed) position. Example: The 2, 5, 6, 7 positions on the receiver are “on”. You would enter 2, 5, 6, 7 for your radio code. If the 10th position on the switch is “on” (closed), the corresponding keypress number is 0**). Finally press the “radio learn” key to end programming sequence. If indicator LED turns off when “radio learn” key is pressed, the new radio code has been successfully programmed (*see example 1*). If the access code was entered incorrectly during programming, the indicator LED will blink at a fast rate for 4 seconds when the “radio learn” key is pressed, then turn off. This indicates an error in the programming procedure and the radio code will remain unchanged (**Note: During the radio learn mode, pressing the same key twice for the radio code will be accepted as one key press. Example: 3-1-1-4 will be accepted as 3-1-4**). Check to see if the new radio code matches your garage door receiver by entering factory access code (1, 2, 3, 4) at this time. If door opens, correct radio code has been entered. If door fails to open, check code on your receiver and reprogram radio code using the above procedure.

TO CHANGE TO RADIO CODE

(EXAMPLE 1)

RADIO	RADIO	1-2-3-4	1-3-5-6-8	RADIO
LEARN	LEARN	ACCESS CODE	NEW RADIO CODE	LEARN

ACCESS CODE PROGRAMMING

To begin programming or change the access code press the “access learn” key twice (The indicator LED will come on indicating learn mode. During the learn mode, the indicator LED will blink off with each keypress). Now enter old access code (**Note: For first time programming, this would be the factory code 1, 2, 3, 4**). Next enter new 4 digit access code. Finally press the “access learn” key to end programming sequence (*see example 2*). If indicator LED turns off when “access learn” key is pressed, the new access code has been successfully programmed. If the old access code was entered incorrectly or more than 4 keys were entered for the new code during programming, the indicator LED will blink at a fast rate for 4 seconds when “access learn” key is pressed, then turn off. This indicates an error in the programming procedure and the access code will remain unchanged. (**NOTE: TO RESET THE RF PROGRAMMABLE KEYLESS ENTRY TO THE FACTORY RADIO CODE AND ACCESS CODE REMOVE 9 VOLT BATTERY FROM UNIT, DEPRESS ANY KEY ON THE KEYPAD AND WAIT 10 SECONDS BEFORE INSTALLING BATTERY**).

TO CHANGE THE ACCESS CODE

(EXAMPLE 2)

ACCESS	ACCESS	1-2-3-4	5-8-3-1	ACCESS
LEARN	LEARN	OLD ACCESS CODE	NEW ACCESS CODE	LEARN

The 4 digit access code can be any combination of the numeral 0-9, from 0000-9999.

During both programming modes the keypad will brighten with first keypress and will go out 25 seconds after last keypress.

OPERATING HINTS

- 1) Pressing any key will cause the keypad to light up and stay on for 25 seconds from last keypress. Your personal access code must be completely entered within 25 seconds of the last number entered. If not, the door will not open and LED's will go out. If you fail to enter the entire code in the allotted time, you must re-enter the entire code. (**if correct access code is not entered within 20 keystrokes, the Programmable Keyless Entry will “lock up” for 5 minutes. During this time all LED's will remain off and all keypad input is ignored**). This is a built in feature to discourage unauthorized tampering.
- 2) Some door openers can be stopped, or reversed (depending on make and model) once the door is in motion. If your door opener allows this type of function this feature is activated by pressing any of the 12 keys a second time once your personal code has been entered. The 12 Programmable Keyless Entry buttons are active as the operator's push-button for approximately 25 seconds (The keypad LED's will flash during these 25 seconds).
- 3) Over time smudges may appear on frequently used buttons. To prevent this, it is advisable to keep your keypad clean, and to change your personal access code from time to time.
- 4) If you forget your programmed access code, disconnect battery from keyless entry, depress any key on the keypad and wait 30 seconds before installing battery. The keyless entry will reset to the factory radio and access codes. You must reprogram both the radio and access codes at this time.

LOW BATTERY MODE

When battery becomes weak, the system enters a low battery mode. During this mode the LED's will blink on with the first keypress and then turn off. The LED's will remain off during remaining code entry to indicate low battery condition. If the correct access code was entered, the keypad LED's will start flashing and the indicator LED will remain out. The keyless entry will work approximately 20 times in the low battery mode.