


Upgrade to OmniControl™ Board From the older style control board


Replacement of Board

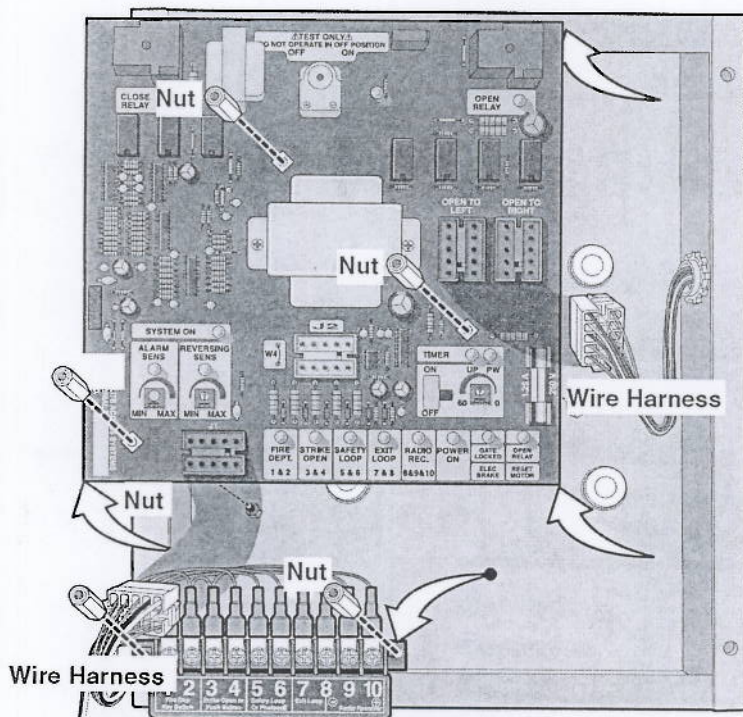

Disconnect power to operator. Disconnect the 2 wire harnesses and remove the old board by removing the 3 nuts. Remove the terminal connection strip by removing the 2 nuts. Reverse this process to install the OmniControl™ board.


⚠ WARNING

To prevent possible **SERIOUS INJURY** or **DEATH** from electrocution, disconnect electric power to operator **BEFORE** installing.
ALL electrical connections **MUST** be made by a qualified individual.

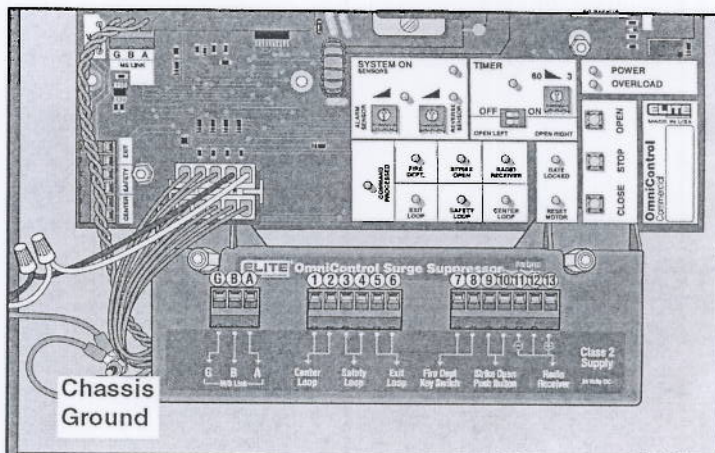


Caution Terminal connections for OmniControl™ are different than the existing board terminal connections.

Limit Switch Wiring


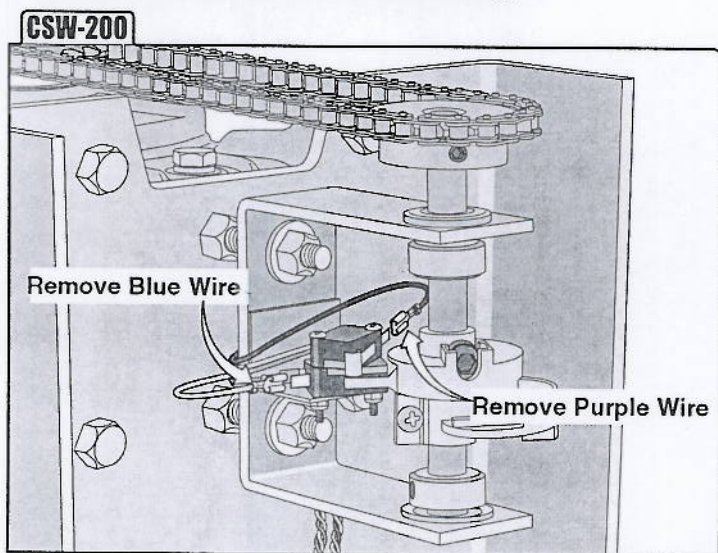


The blue and purple wires are **NOT** used on the limit switches with the OmniControl™ board. Reconnect power to operator after installation is complete.

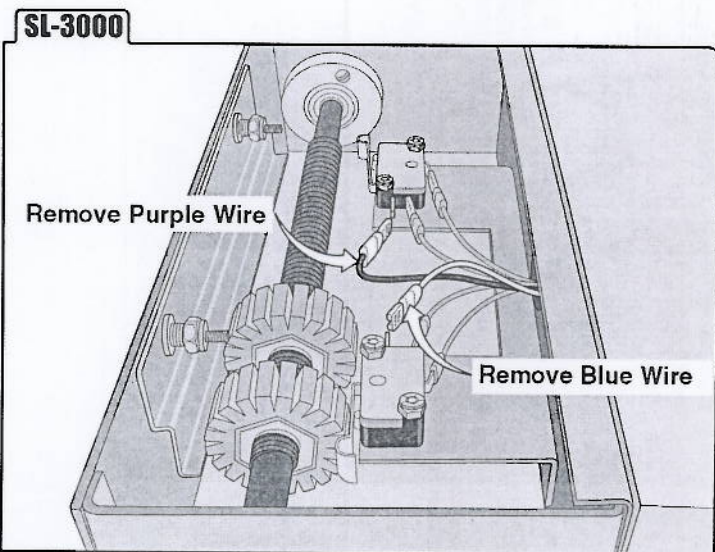

For the OmniControl™ ho



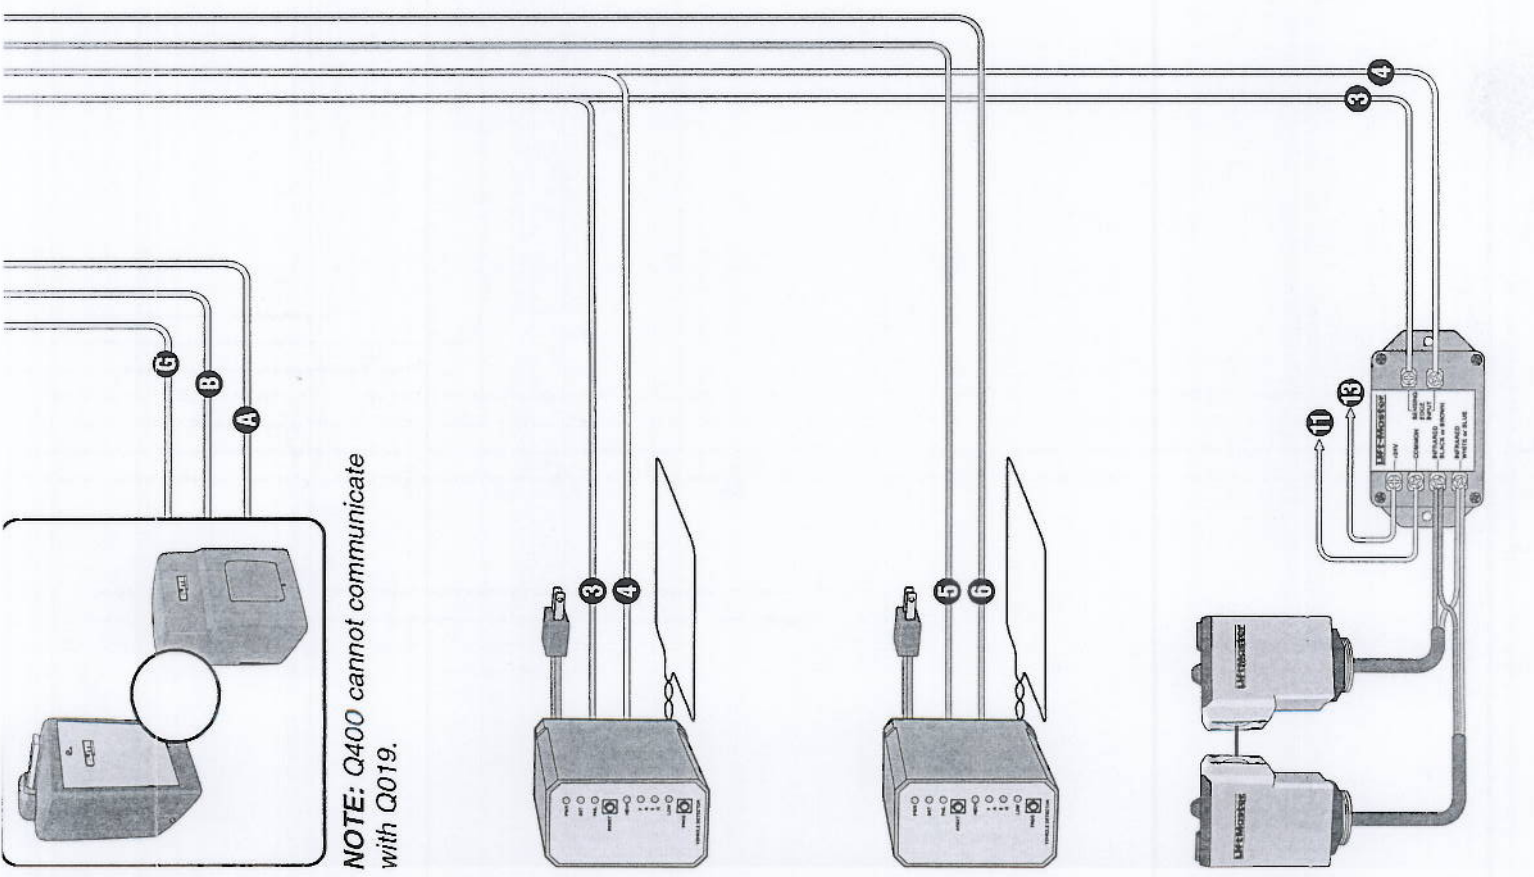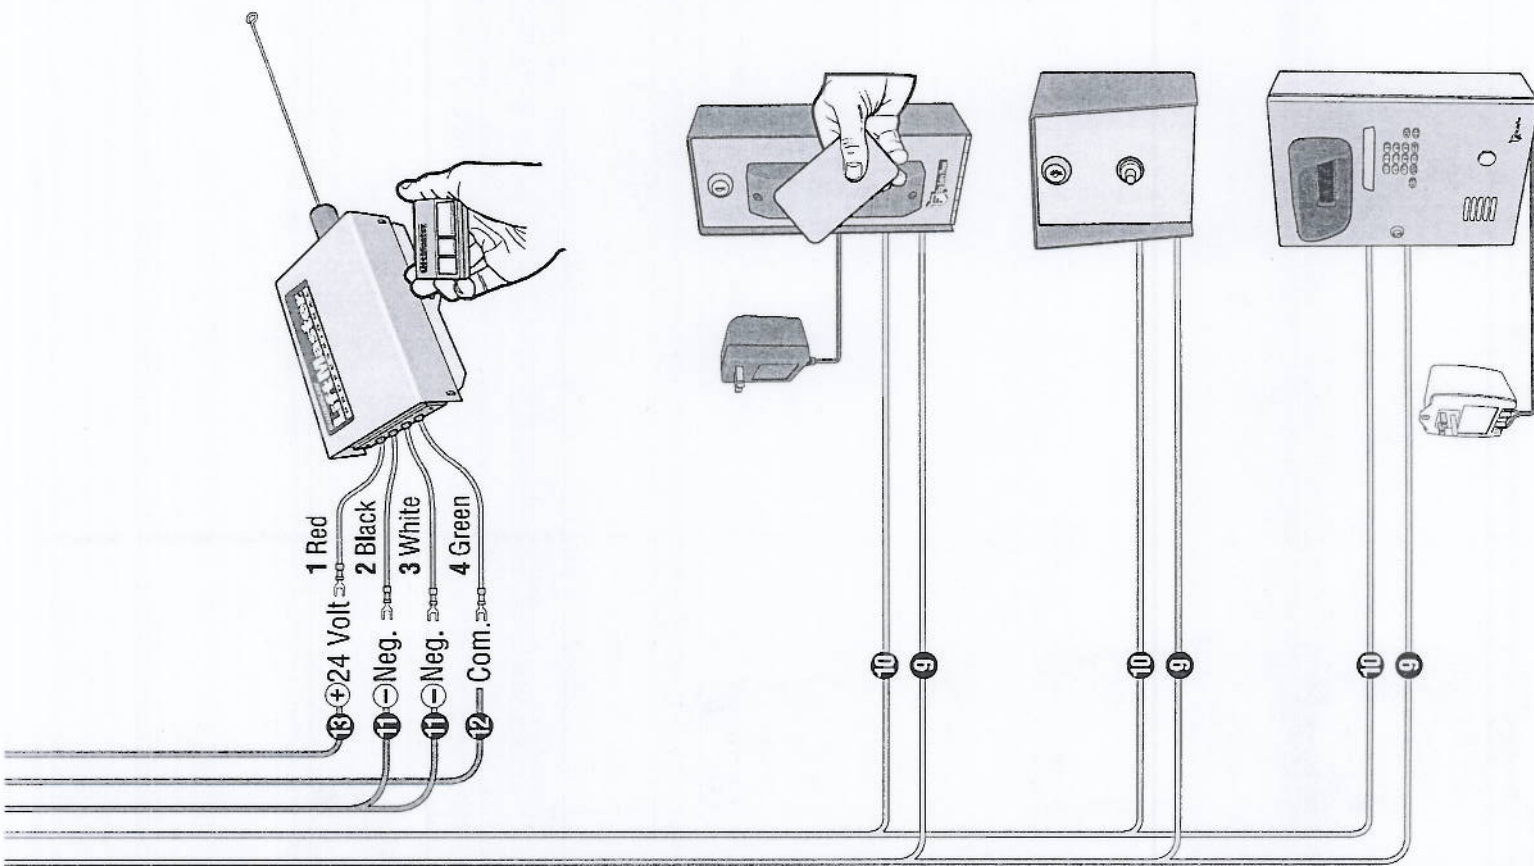

NOTE: Q400 cannot communicate with Q019.